


i9P

Installation and Operation

User Guide

Document Number: 2012H0-UM1004-v1_3

Intellian i9P Serial Number



This serial number will be requested for all troubleshooting or service inquiries.

Notice All Right Reserved

Intellian i9P® and Intellian® are the registered trademarks of Intellian Technologies, Inc., and should not be appropriated without permission by Intellian Technologies, Inc., and the information contained in this manual is the property of Intellian Technologies, Inc. Any and all parts of this manual shall not be reproduced and distributed in any form without prior written consent by Intellian Technologies, Inc. The information contained in this manual shall be subject to change at any time without notice due to the functional upgrades of the product.



INTRODUCTION	4	PREPARATION FOR TRANSPORTATION	58
INTRODUCTION TO INTELLIAN i9P	4	WARRANTY	59
FEATURES OF INTELLIAN i9P	4	APPENDIX : TECHNICAL SPECIFICATION	60
BASIC SYSTEM CONFIGURATION OF INTELLIAN i9P	5		
INSTALLATION THE ANTENNA	6		
SYSTEM COMPONENTS	6		
TOOLS REQUIRED FOR INSTALLATION	9		
PLANNING THE INSTALLATION	10		
INSTALLING THE ACU	15		
ACU DIMENSIONS	15		
CONNECTING THE SYSTEM TO A GPS	18		
AUTO LNB SKEW ANGLE ADJUSTMENT	19		
OPERATION INSTRUCTION	20		
INTRODUCTION	20		
OPERATING THE ACU	20		
ACU SOFT KEYS	20		
NORMAL MODE	21		
SETUP MODE	24		
OPERATION USING PC CONTROLLER PROGRAM	45		
INTRODUCTION	45		
PROGRAM INITIALING AND SERIAL PORT SETUP	46		
MAIN MENU	47		
CONTROLLER MENUS	49		

Introduction

Introduction to Intellian i9P

Intellian i9P is a digital satellite antenna system designed specifically for all types of vessels (Anchored or transit) to automatically identify, track and capture satellite signals from the Digital Video Broadcasting (DVB: the international standard for digital TV transmissions) compatible satellites.

Specifically, Intellian i9P has Wide Range Search (WRS) algorithm, which minimizes the search time during initialization, and Dynamic Beam Tilting (DBT) technology, which dynamically shapes the antenna beam to utilize stabilization. While tracking the target satellite, DBT technology uses a high-performance, constantly adjusting sub-reflector which allows the antenna to remain relatively still, eliminating the constant whine of stepper motors while staying locked on to the satellites.

The i9P has a built-in GPS system which enhances the speed of satellite signals acquisitions. In addition, the i9P provides the embedded auto skew angle control system to maintain the optimal signal strength and increase the quality of satellite receptions in weak satellite single coverage area.

Features of Intellian i9P

Enjoy satellite broadcasts at sea

Intellian i9P is the most modern antenna system that enables you to receive a high quality broadcasting signal at sea, where the atmospheric and environmental condition can be challenging.

Fully automatic control system

Fully automatic control system allows you to simply turn the power switch on, and have crystal clear, high quality satellite television in motion or at anchor.

Fast and efficient search for the satellite

The WRS (Wide Range Search) algorithm allows for the antenna system to search the satellite within the shortest amount of time and to detect the satellite signal under any position and with any directional movement of the ship.

Outstanding reliability

The Intellian i9P is a highly reliable system through the implementation of a modularized design, and the usage of proven and tested components.

Built-in GPS

The Intellian i9P has an embedded GPS, which allows for the upload of GPS data automatically for an even faster and stable system.

Built-in automatic skew angle control system

The automatic skew control system allows Intellian i9P to maintain the optimal skew angle at all times and ensure the maximum level of satellite signal level.

Basic System Configuration

For your satellite TV system to work properly, the system will have to be connected with all of the provided components properly, as shown in the figure below (see the “Installation” section of this manual). Separate purchase of a satellite receiver and a TV is required.

Note: Dish Network and Bell TV users please refer to the Intellian Dish Network MIM Installation and User Manuals.

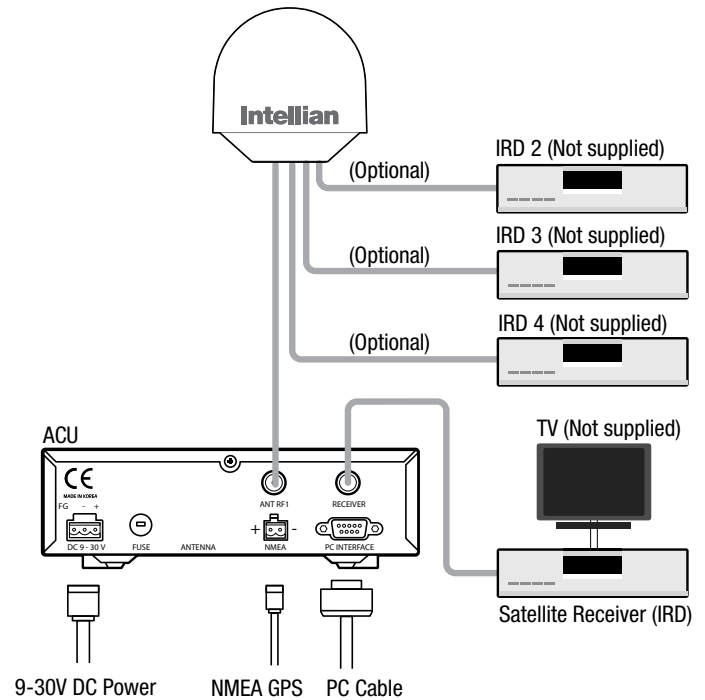


Figure 01 : Basic System Configuration

Installation

System Components

The Intellian i9P consists of two major units, antenna assembly unit and antenna control unit.

Antenna Unit

The antenna of Intellian i9P is manufactured with the following components for the optimum search and reception of the satellite signal.

- Mechanical Unit – manipulates the antenna to receive the optimal satellite signal regardless of the movement of the vessel.
- Control Unit – controls mechanical operation of the antenna.
- RF Unit – transmits the optimum satellite signal to the receiver.
- Radome – protects the antenna from the severe marine environment.



Figure 02 : Antenna Unit


Antenna Control Unit (ACU)

Antenna Control Unit (ACU) provides the power to the antenna and controls the various settings of the antenna. Additionally, Vacuum Fluorescent Display (VFD) allows for you to operate the ACU in the dark.

The functions of ACU are as follows:

- Provide power for the antenna unit
- Monitor the antenna status
- Change the target satellite
- Set up the user environment
- Set the current GPS information
- Set satellite information
- Move antenna manually
- Perform self-diagnosis of the antenna
- Set up the interface with a PC

Front

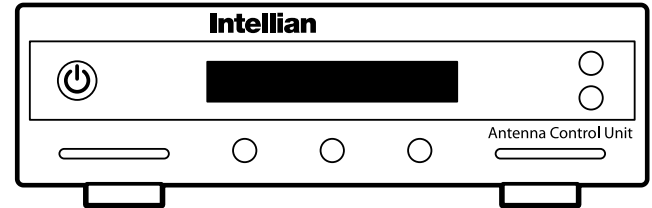

Rear

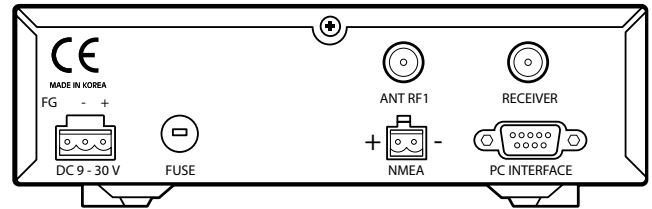


Figure 03 : Antenna Control Unit (ACU)

Intellian Satellite TV Antenna Systems

Installation Kit

Contains the items required for securing the antenna unit and ACU to the vessel.







Antenna				
Item				
	Hex.Bolt	Flat Washer	Spring Washer	Hex. Nut
Qty	5	5	5	5
ACU				
Item				
	Self-Tapping Screw		Machine Screw	
Qty	5		5	
Size	(M4 X 16L)		(M3 X 8L)	


Figure 04 : Installation Bolt Kit

Other Components


No	Components	Size	Qty
1	ACU Bracket	-	2
2	RG6 (Antenna - ACU RF Cable)	30m	1
3	RG6 (ACU - IRD Cable)	3m	1
4	Power Cable	10m	1
5	PC Serial Cable	1.8m	1
6	NMEA Connector	AK950-2	1
7	Power Connector	AK950-3	1
8	Hex Bolt	M12x80L	5
	Self-Tapping Screw	ø4x16L	5
		ø3x8L	5
	Flat Washer	M12	5
	Spring Washer	M12	5
9	Nut	M12	5
	Install CD	-	1
10	User Manual	-	1
11	Mounting Template	-	1
12	Quick Installation Guide	-	1

Figure 05 : List of the Supplied Parts


Tools Required for Installation

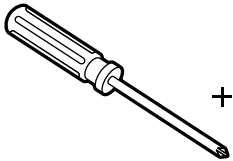


**Phillips Head
Screwdriver**

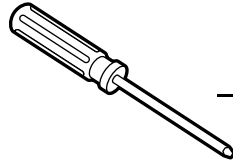


**Flat Head
Screwdriver (Min. 5mm)**

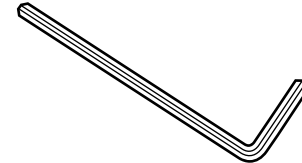


5 mm Allen/Hex key

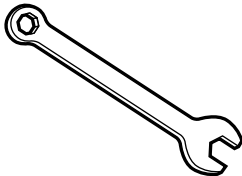

11 mm Spanner

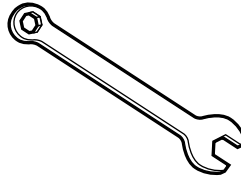

13 mm Spanner

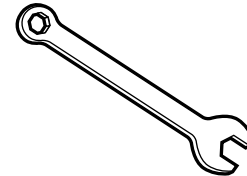

19 mm Spanner

Figure 06 : Required Tools for Installation

Planning the Installation

Selection of Antenna Installation Site

Install the antenna in accordance with the following procedures to insure maximum performance.

The antenna should be installed in a place where there is all round clear view of the horizon. Please be sure there are no obstacles within 15° above the antenna. Any obstacles can prevent the antenna from tracking the satellite signal (Refer to the drawing on the right).

Do not install the antenna near the radar especially on the same plane. Its energy levels may overload the antenna front-end circuits. It is recommended to position the antenna at least 4 feet (1.2m) above or below the level of the radar and minimum of 15 feet (4.6m) away from the high power short wave radars.

The mounting platform should be rigid and not subjected to excessive vibration. The movement of the antenna can be minimized by installing at the center of the vessel. For optimal performance of the antenna, it is not recommended to install at any corner of the vessel, where the movement of the vessel is the greatest. Install the bottom of the antenna parallel to the surface of the sea and fix tightly to the structure of the vessel.

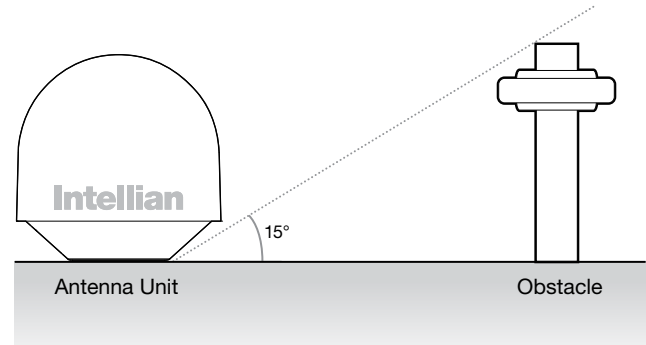


Figure 07 : Elevation Limit of Obstacles

Cables

Before installing the system cables, consider the following points.

- All cables need to be well clamped and protected from physical damage and exposure to heat and humidity.
- Cables with severe bends are not allowed.
- Where a cable passes through an exposed bulkhead or deckhead, a watertight grommet or swan neck tube should be used.

Power Requirements

You need to follow the power requirements to avoid damage the system. Intellian i9P has been designed to work on a boat's power supply rated at 12V / 24 V DC (acceptable range: 9~30 V DC).

If your IRD(s) and television(s) require a 110V/240V AC power supply, you will need to install a suitable DC to AC converter to operate the unit(s) from your boat's DC power supply.

RF Cable

This cable supplied at a length of 30m. If a longer length is required you should replace this cable with an extended RF cable.

Extending the Cables

The cables that have been supplied with your Intellian system should be of adequate length to complete the installation on most boats.

Power Cable

This cable supplied at a length of 10m.

Note: Exceeding the indicated cable lengths will result in reduced performance of your system.

Intellian Satellite TV Antenna Systems

Installation and Mounting of Antenna

The method of installation and mounting of the antenna may vary due to vessel design but the following procedures are applicable in most situations, and will result in a secure and effective installation.

Confirmation of Size Prior to Installation

- Confirm the height and diameter of the bottom surface of the antenna before installing.
- The space must be sufficient for installing the antenna unit considering the height and diameter of the antenna.
- The height and the diameter of the bottom surface of the antenna are as shown in the following drawing. If possible, install the antenna using a power tower.

Note: Before installing the antenna open the radome and remove the shipping constraints from the antenna interior. Reinstall the radome before operating the system. The system will not perform properly if the radome is open.

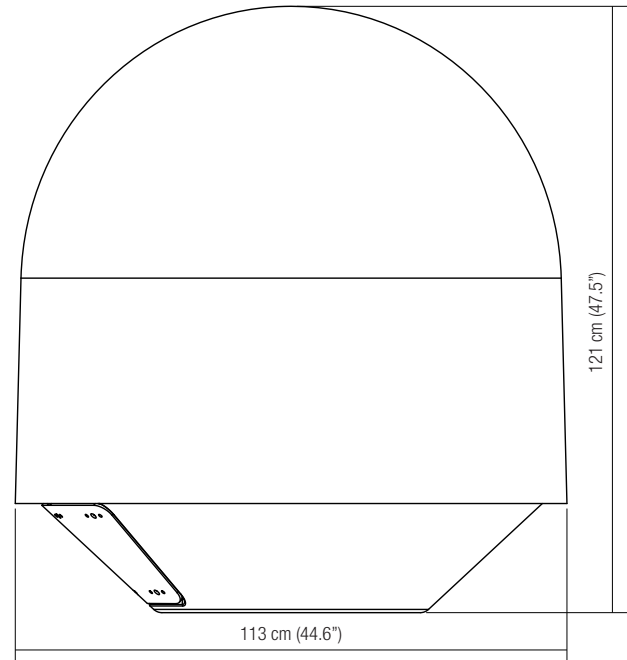


Figure 08 : Radome Dimension of i9P

Mark of the Antenna Mounting Position

Referring to the mounting template, mark where antenna will be mounted onboard (it must be a flat surface) or on a separate power tower.

Note: If a power tower is not suitable to mount the antenna, separate cable shock and waterproofing measures must be taken to protect the RF connector from being exposed to the sea water and external shocks. An exposed cable may cause electric shock and cause serious damage to the equipment.

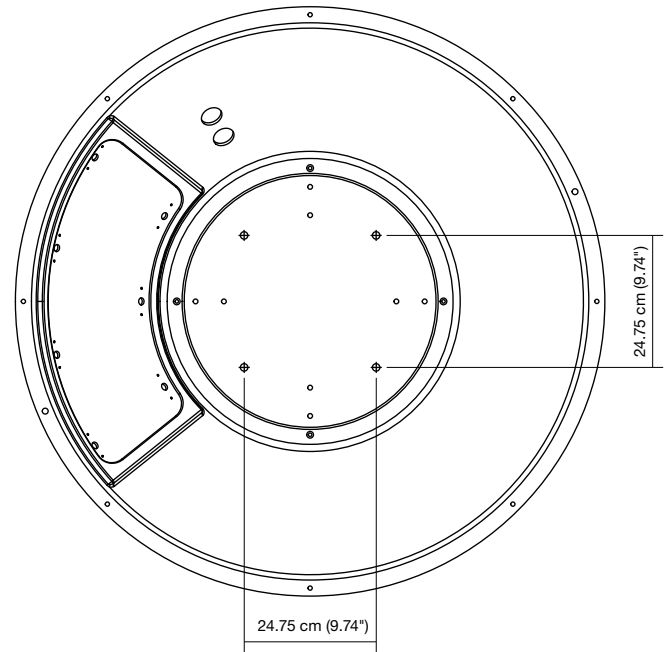


Figure 09 : Mounting Hole Position of i9P

Connection of the Cable

Connect the RF cable through the cable glands under the radome bottom.

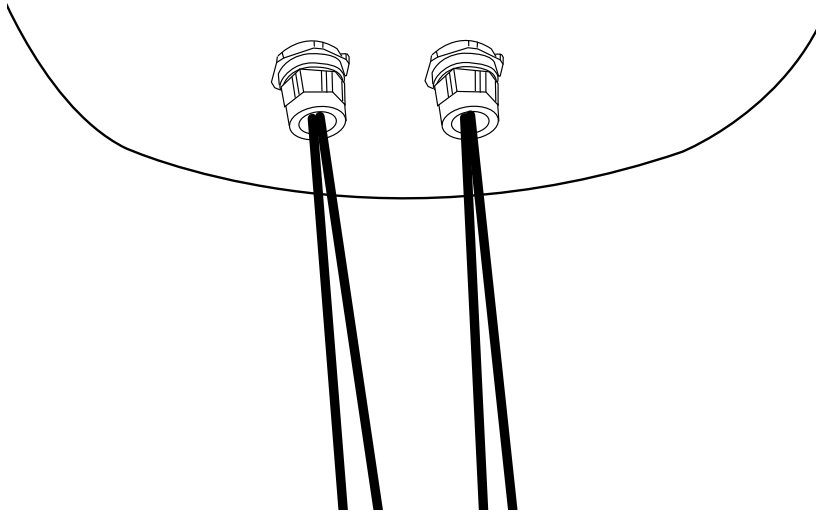


Figure 10 : Cable Glands on Radome Bottom

Mounting the Antenna

Attach the antenna by using the hex head bolts (M12X80L), M12 spring washers, and M12 flat washers supplied.

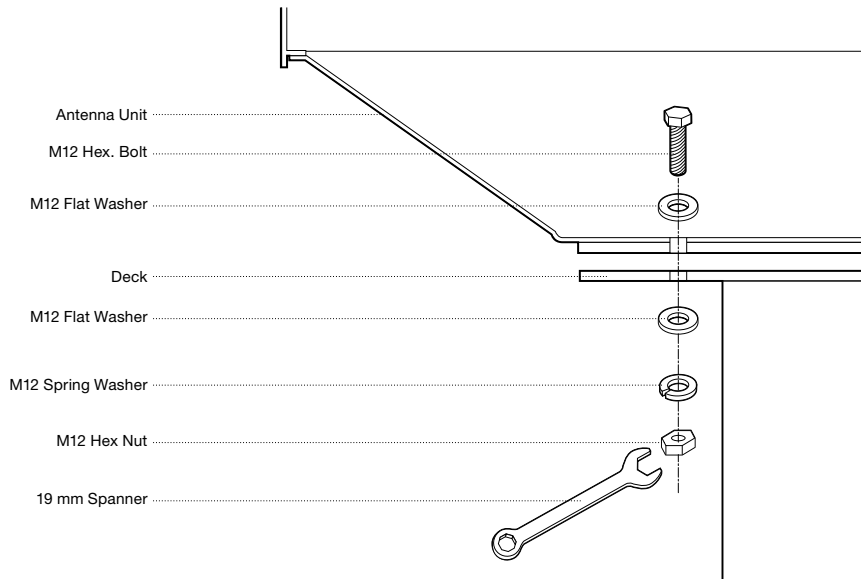


Figure 11 : Mounting the Antenna

Installing the ACU

ACU Dimensions

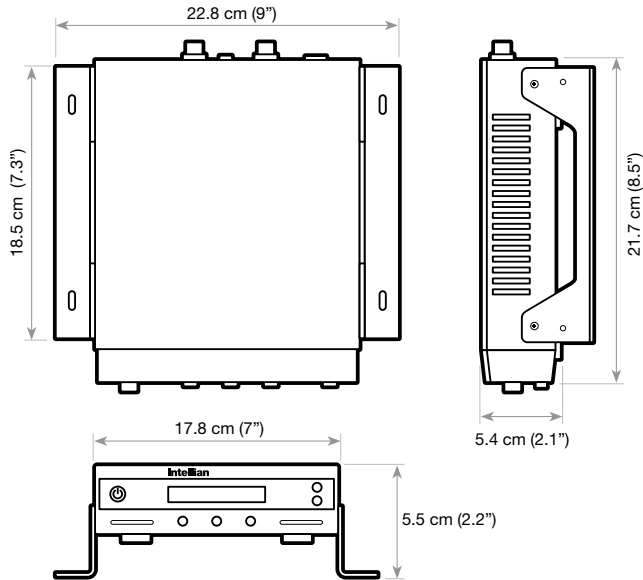


Figure 12 : Dimension of ACU for i9P

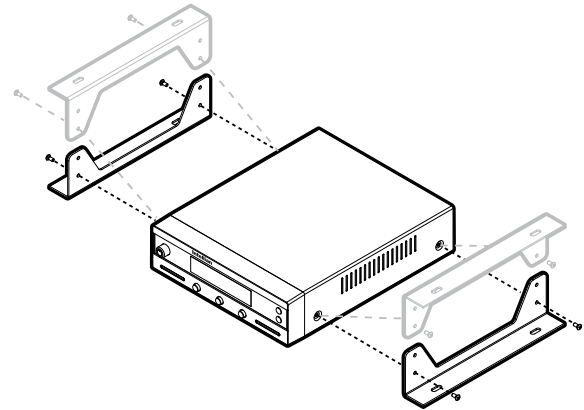


Figure 13 : Installation of ACU

Selection of ACU Installation Site

The ACU should be installed below deck, in a location that is:

- Dry, cool, and ventilated.
- Easy accessible from your main TV viewing area.

Installing the ACU

- The ACU should be installed using the two supplied Table Mounting Brackets which allow for a top or bottom mounting configuration.
- Using the self tapping screws supplied, attach the mounting brackets to the sides of the ACU.
- Place the ACU in the location where it is going to be installed.
- Using a pencil to mark the 4 hole positions (2 each side), and use the appropriate drill bit to drill them.
- Connect the cables to the rear of the ACU.

Connecting the System Cables

After installation and fixation of the antenna, connect the ACU to the antenna. Refer to the drawing on the right to connect cables.

- Connect the RF cable (30m) from the RF1 connector on the antenna power switch box to the RF1 connector on the ACU
- Connect the RF cable (3m) from the receiver connector on the ACU to the RF connector on the IRD.
- Connect the power cable (10m) from DC power connector on the rear of ACU to a power source at 12 VDC/ 24 VDC.
- Press the POWER ON switch in front of the ACU to start the operation of the antenna system automatically.

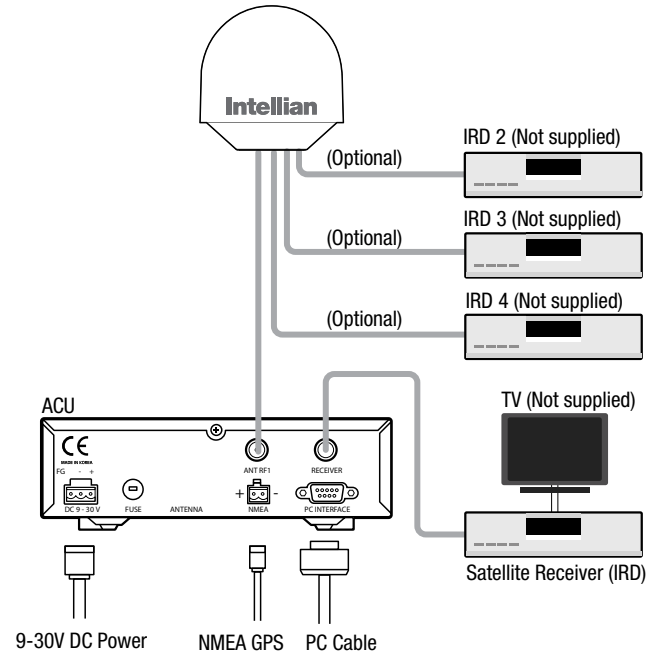


Figure 14 : Basic Configuration

Connecting the system to a GPS

Your satellite TV system has a built-in GPS. If the internal GPS doesn't operate properly, you can directly connect your boat's NMEA 0183 GPS to the system through the ACU's external GPS connector. To do this you will need a suitable cable to connect your GPS system and the green 2-way ACU GPS connector supplied with your Intellian i9P Satellite TV System.

1. Strip back the insulation of each conductor and connect each terminal of the 2-way connector.
2. Tighten the locking screws.
3. Connect the +ve (positive) terminal of the ACU GPS connector to the NMEA OUT wire of the boat's GPS system.
4. Connect the -ve (negative) terminal of the ACU GPS connector to the ground wire of the boat's GPS system.
5. Refit the ACU GPS connector to the rear of the ACU.

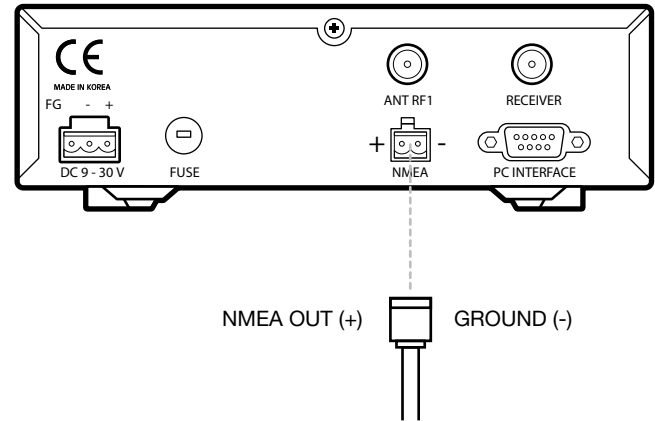


Figure 15 : GPS Connection

Auto LNB Skew Angle Adjustment

Intellian i9P has an embedded auto skew angle control system. Therefore, manual adjustment of the skew angle is not required. The skew angle is continuously adjusted automatically through calculations of the optimum angle by using the information of a targeted satellite and the GPS position. With location information as ship's longitudinal and latitudinal position change from movement the skew angle will be adjusted accordingly. As the ship changes position, the skew angle will be continuously adjusted. The skew angle of the LNB is shown on the ACU and in the GUI program.

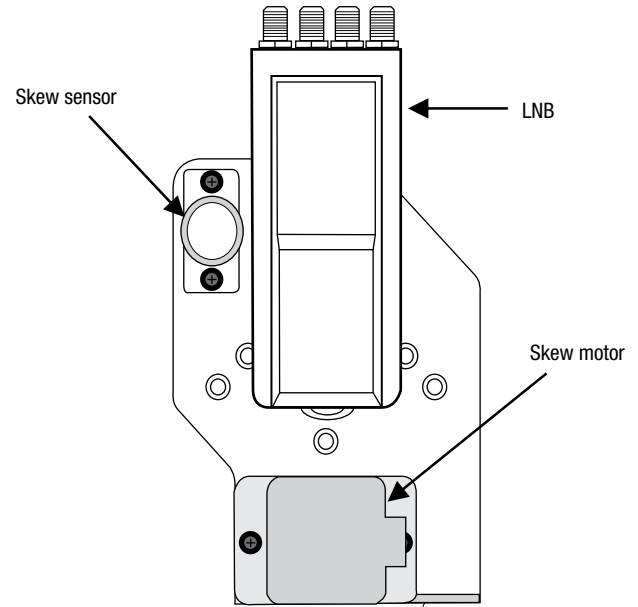


Figure 16 : Auto LNB Skew Angle Control System

Operation Instruction

Introduction

This section of the handbook describes how to setup your Satellite TV System after installing the ACU. It includes the following functions:

- System startup
- Changing the default satellite
- Monitoring the antenna status
- Setting sleep mode
- Entering setup mode
- Setting the satellite pair
- Editing satellite information
- Setting the antenna parameter
- Setting GPS
- Setting the DiSEqC method
- Display versions
- Display power status
- Setting antenna go position
- Setting antenna move step
- Setting remote control
- Setting the factory default parameters
- Performing diagnostic tests

Note: Many of the listed functions will only be required only after initial installation of your system. Refer to the Quick Installation Guide before operating the system.

Operating the ACU

ACU Soft Keys


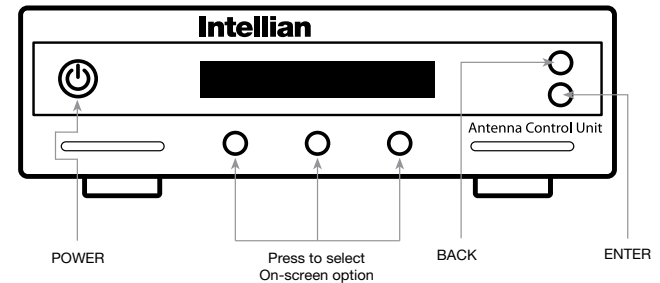


Figure 17 : ACU Soft Keys


Normal Mode

Start Up


With the system installed and power applied, the ACU screen will show the following sequence:




1. Data communication is being established between the antenna and the ACU. The ACU is initialized.



2. The antenna is initialized.



3. The antenna is searching for Satellite A.




4. The antenna has located the satellite and is now tracking.


Changing Target Satellite

Your antenna is pre-programmed with either two (Dual-Sat mode) or three (Tri-Sat mode) candidates of target satellites as a default mode. To change a target satellite, press LEFT soft key. The target satellite is changed and is automatically tracked by the antenna.

Default Dual-Sat Mode

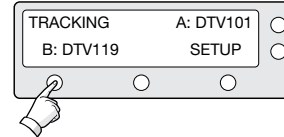

1. Press LEFT soft key for tracking Satellite B.

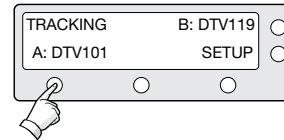


2. The antenna is tracking Satellite B.


Intellian Satellite TV Antenna Systems

Advanced Tri-sat Mode


With the system installed and power applied, the ACU screen will show the following sequence.

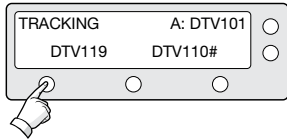


1. Press LEFT soft key for tracking Satellite B.



2. The antenna is tracking Satellite B.

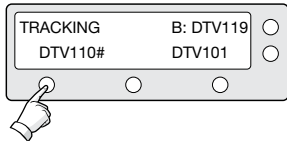


3. Press LEFT soft key for tracking Satellite C.




4. The antenna is tracking Satellite C.

Monitoring Current Status


When powered on, ACU displays the status of the antenna.
The current status of the antenna is displayed as shown below.




1. The antenna is searching for satellite A.




2. The antenna is tracking satellite A.




3. The antenna is unwrapping the cable.



4. The antenna is again tracking satellite A.
Press center soft key to display position detail.

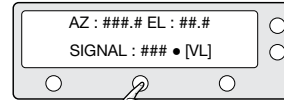

5. Antenna position detail and signal strength are displayed.




6. Press center soft key to display current GPS information. Press center soft key to return to main tracking mode.


Intellian Satellite TV Antenna Systems

Sleep Mode

If the antenna has lost the tracked satellite while in sleep mode, sleep mode will be canceled.



1. Press BACK to enter sleep mode.




2. Press BACK again for exiting sleep mode.


Setup Mode

Begin Setup Mode


To enter the Setup Mode simply follow the instructions below:

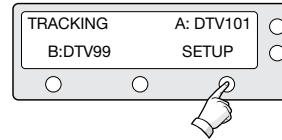

1. While the antenna is tracking press SETUP

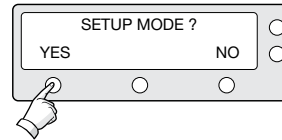


2. Press YES to enter setup mode.

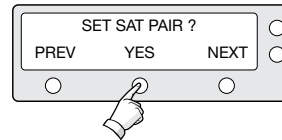


3. Press YES to set the satellite pair.

Setting the Satellite Pair


You can change the satellite pair if you decide to receive satellite television service from a different service provider.




1. Press YES to enter setup mode.




2. Press YES to set satellite pair.




3. Press YES to set triple satellites.




4. Set satellite A
Press PREV to show previous satellite name.
Press SELECT to set chosen satellite to SAT A.
Press NEXT to show next satellite name.



5. Set satellite B
Press PREV to show previous satellite name.
Press SELECT to set chosen satellite to SAT B.
Press NEXT to show next satellite name.



6. Set satellite C
Press PREV to show previous satellite name.
Press SELECT to set chosen satellite to SAT C.
Press NEXT to show next satellite name.




7. Press YES to save selections.
Press NO to cancel and return to main setup mode.


Intellian Satellite TV Antenna Systems

Setting the GPS


It is possible to set up and modify the GPS information, which enhances the antenna functionality.

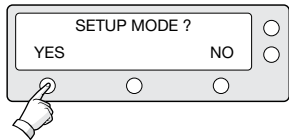


1. Press YES to enter setup mode.

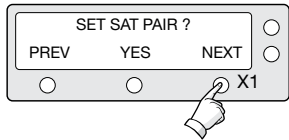


2. Press NEXT to enter GPS setup mode.

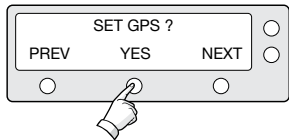


3. Press YES to set GPS.

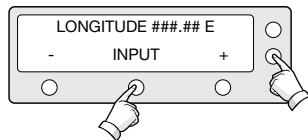

4. Input the longitude data.
+ increases the value. - decreases the value.
Change the underscored digit using the +/- buttons.
Press INPUT to accept the value and move to next digit. Press BACK to move to previous digit.



5. Press ENTER to move to next screen.
Press BACK to move to previous screen.

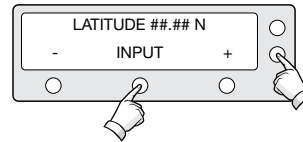


6. Input the latitude data.
+ increases the value. - decreases the value.
Change the underscored digit using the +/- buttons.
Press INPUT to accept the value and move to next digit.
Press BACK to move to previous digit.




7. Press YES to accept data.
Press NO to cancel and return to main setup mode.

Edit Satellite Information


It is possible to modify the existing satellite information and input new satellite information into the ACU as well. It is not recommended for a novice satellite service user to use this mode.




1. Press YES to enter setup mode.




2. Press NEXT twice to enter edit satellite info mode.




3. Press YES to edit satellite info.




4. Set the satellite name.
PREV - Shows previous satellite name.
SELECT - Select the displayed satellite for editing.
NEXT - Shows next satellite name.
Press ENTER to move to next screen.




5. Input the satellite name.
+ increases the value. - decreases the value.
Change the underscored digit using the +/- buttons.
Press INPUT to accept the value and move to next digit.
Press BACK to move to previous digit.



6. Press ENTER to move to next screen.
Press BACK to return previous screen.




7. Input the satellite position.
+ increases the value. - decreases the value.
Change the underscored digit using the +/- buttons.
Press INPUT to accept the value and move to next digit.
Press BACK to move to previous digit.




8. Input the tracking frequency (MHz) and symbol rate (KHz) for vertical low band.


Intellian Satellite TV Antenna Systems

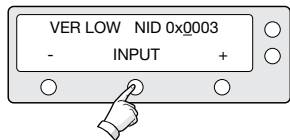


9. Input the network ID (NID) for vertical low band.

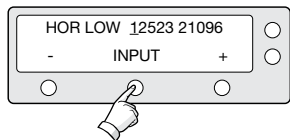


10. Input the tracking frequency (MHz) and symbol rate (KHz) for horizontal low band.

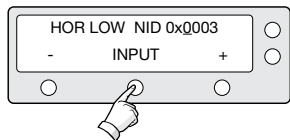


11. Input the network ID (NID) for horizontal low band.

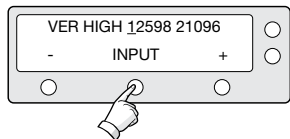


12. Input the tracking frequency (MHz) and symbol rate (KHz) for vertical high band.

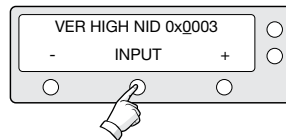


13. Input the network ID (NID) for vertical high band.

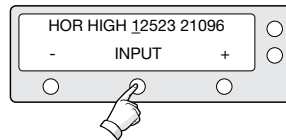


14. Input the tracking frequency (MHz) and symbol rate (KHz) for horizontal high band.

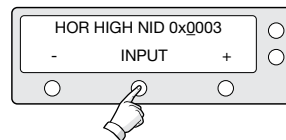


15. Input the network ID (NID) for horizontal high band.

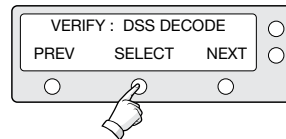

16. Select the **Verification Method*** of tracking satellite.
 PREV - Shows previous method.
 SELECT - Set the displayed method.
 NEXT - Shows next method.

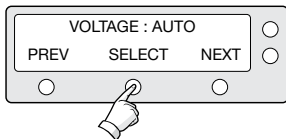

17. Select the **Voltage Supply Method*** to LNB.
(AUTO is recommended)

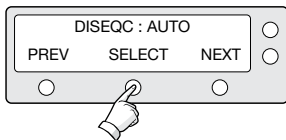

18. Select the **DISEQC Method***.
(AUTO is recommended)



19. Press YES to save the input information.
Press NO to cancel and return to main setup mode.

Verification Method*

SIGNAL - use only signal level for tracking
DVB LOCK - use only DVB Lock signal for tracking
DVB DECODE - verify satellite using DVB decoding method for tracking
DSS DECODE - decode only DSS Lock signal for tracking
AGC AFTER DECODE - for tracking Ka-Band satellite

Voltage Supply Method*

AUTO – Supply 13V or 18V to LNB
ONLY 13 V - always supply 13 V to LNB
ONLY 18 V - always supply 18 V to LNB


DISEQC Method*

AUTO – Supply 0KHz tone or 22KHz tone to LNB
ONLY 0 KHz – always supply 0KHz tone to LNB
ONLY 22 KHz – always supply 22KHz tone to LNB


Intellian Satellite TV Antenna Systems

Setting the Antenna Parameters


It is not recommended for a novice satellite service user to use this mode. Consult Intellian for changing antenna parameters.




1. Press YES to enter setup mode.




2. Press the NEXT three times to enter set Antenna Parameter menu.




3. Press YES to set antenna parameter.




4. Select the **PARAM***
PREV - Shows previous parameter.
SELECT - Set the displayed parameter.
NEXT - Shows next parameter.
Press ENTER to move to next screen.



5. Input the WRS LEVEL.
+ increases the value. - decreases the value.
Change the underscored digit using the +/- buttons.
Press INPUT to accept the value and move to next digit.
Press BACK to move to previous digit.
Press ENTER to move to next screen.



6. Press YES to setup another parameter.
Press NO to cancel and return to main setup mode.



7. Press YES to save the input information.
Press NO to cancel and return to main setup mode.

PARAM*

Scan Offset The scan offset is to offset the angle difference between the black marker on the sub-reflector and the optical sensor.

DiSEqC Level The DiSEqC level is to distinguish 0KHz tone and 22KHz tone.

Track Scale The track scale is to control the tracking speed while antenna is tracking the satellite.

Offset RH-LH The offset RH-LH is to offset the signal difference between RHCP and LHCP.

Detect Level The detect level is to set the satellite signal detection level.

EL Offset The EL offset is to offset the angle difference between the mechanical elevation angle and actual elevation angle.

WRS Level The WRS level is to set the WRS detection level.

Use WRS Use WRS is to determine whether the system uses WRS level or not. "Use WRS" and "WRS Level" are pair functions.

Track Offset The tracking offset is to offset the satellite signal tracking level.


Offset Difference Offset difference is to determine whether the system to uses "Offset RH-LH" or not. "Offset Difference" and "Offset RH-LH" are pair functions.

Power Level The power level is to distinguish the voltage between 13 V and 18 V.


Setting the LNB Local Frequency

It is possible to select a local frequency from ACU. It is not recommended for a novice satellite service user to use this mode.


Case1. Single band LNB is used.

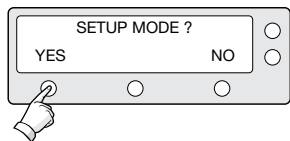


1. Press YES to enter setup mode.

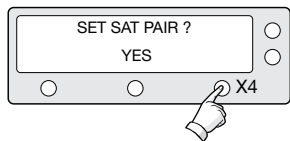


2. Press NEXT four times to enter set local frequency mode.

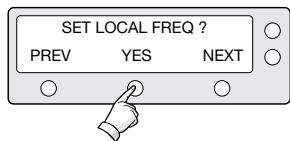

3. Press YES to set local frequency.

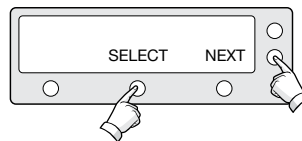

4. Select the **LNB Type*** - SINGLE
PREV - Shows previous LNB type.
SELECT - Set the displayed LNB type.
NEXT - Shows next LNB type.
Press ENTER to move to next screen.

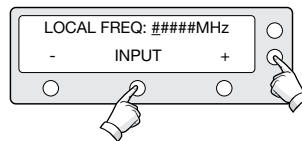


5. Input the local frequency of LNB.
+ increases the value. - decreases the value.
Change the underscored digit using the +/-buttons.
Press INPUT to accept the value and move to next digit.
Press BACK to move to previous digit.
Press ENTER to move to next screen.




6. Press YES to accept the data.
Press NO to cancel and return to main setup mode.


Case 2. Universal LNB is used (Low band local frequency-9750 MHz/ High band local frequency 10600 MHz).

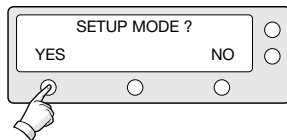


1. Press YES to enter setup mode.

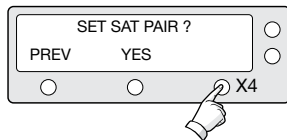

2. Press NEXT four times to enter set local frequency mode.

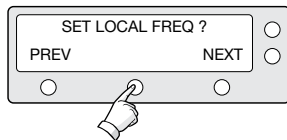

3. Press YES to set local frequency.

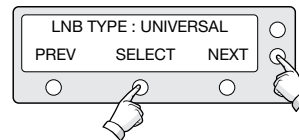

4. Select the **LNB Type*** - UNIVERSAL.
PREV - Shows previous LNB type.
SELECT - Set the displayed LNB type.
NEXT - Shows next LNB type.
Press ENTER to move to next screen.



5. Press YES to accept the data.
Press NO to cancel and return to main setup mode.

LNB Type*

SINGLE: Single Band LNB

Asia 11300 MHz, Japan 10678 MHz, Korea 10750 MHz,
America 11250 MHz

UNIVERSAL : Universal LNB


Low band local frequency - 9750 MHz

High band local frequency - 10600 MHz


Intellian Satellite TV Antenna Systems

Setting the DiSEqC Method


DiSEqC selection can be made from ACU. It is not recommended for a novice satellite service user this mode.

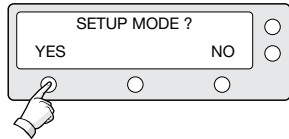


1. Press YES to enter setup mode.

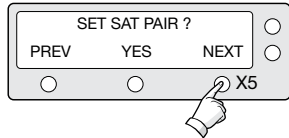

2. Press NEXT five times to enter DISEQC mode.

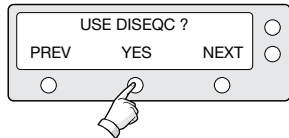


3. Press YES to use DISEQC.

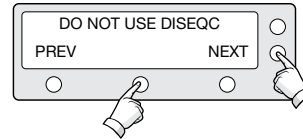

4. Select the **DiSEqC Method***

PREV - Shows previous DiSEqC Method.
SELECT/ENTER - Set the displayed DiSEqC method.
NEXT - Shows next DiSEqC Method.
Press ENTER to move to next screen.



5. Press YES to accept the selection.

Press NO to cancel and return to main setup mode.

DiSEqC Method*


DO NOT USE DISEQC - DiSEqC is not being used.

USE TO CHANGE BAND - DiSEqC is being used to change to low and high band.


USE TO CHANGE SAT - DiSEqC is being used to change tracking satellite.

Display Versions


This sequence enables you to see what version of antenna and ACU software are installed on your system.

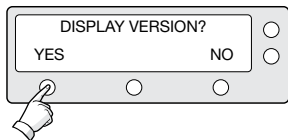


1. Press YES to enter Display Version.

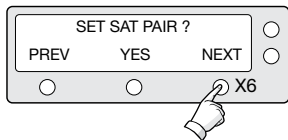


2. Press NEXT six times to enter the View Version mode .

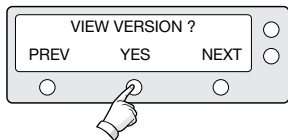


3. Press YES to view version.




4. Antenna product name and S/N are shown.
Press EXIT to return to main setup mode.



5. Antenna software version and S/N are shown.
Press EXIT to return to main setup mode.




6. ACU software version and S/N are shown.
Press EXIT to return to main setup mode.




7. Library version and S/N are shown.
Press EXIT to return to main setup mode.

Intellian Satellite TV Antenna Systems


Display Power

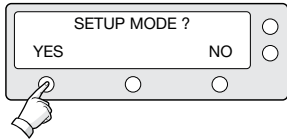


1. Press YES to enter setup mode.

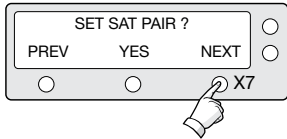


2. Press NEXT seven times to enter the view power mode.

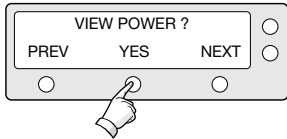


3. Press YES to view power.



4. ACU input voltage is shown.
ACU output voltage is shown.
Press any key to return to main setup mode.




5. Antenna input voltage is shown.
Press center soft key to view IRD Voltage and frequency.
Press EXIT to return to main setup mode.




6. IRD voltage and frequency are shown.
Press EXIT to return to main setup mode.


Setting Remote Control

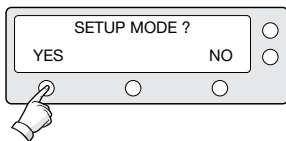


1. Press YES to enter setup mode.

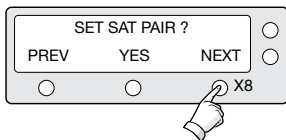


2. Press NEXT eight times to enter remote control setting mode .

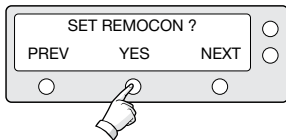

3. Press YES to set remote control.

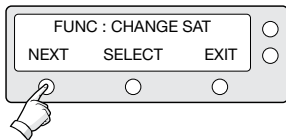

4. Select the **Function***
NEXT - Shows next function.

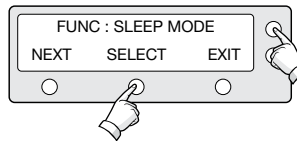


5. SELECT/ENTER - Registers a key on remote control.



6. Point remote control to ACU.
Press any key on remote control for selected function and press same key again for confirmation.
Press BACK to move to previous screen.
Press EXIT to return to main setup mode.




7. If failed to press the same key twice, TRY AGAIN will be displayed.

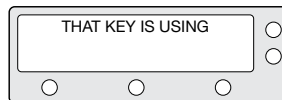

8. If failed to register a free key, KEY IS USING will be displayed.



9. REMOTE KEY REGISTERED will be displayed if key has been properly registered.



10. Press NEXT to shows next function.
Press EXIT to return to main setup mode.

Function*


CHANGE SAT - Change the target satellite.

SLEEP MODE - Enter sleep mode.


CLEAR REGISTERED KEY - Clear registered key.

Setting Antenna Go Position


The antenna can be controlled manually by using ACU.

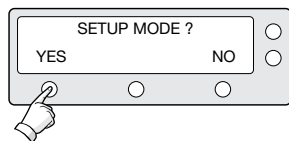


1. Press YES to enter setup mode.

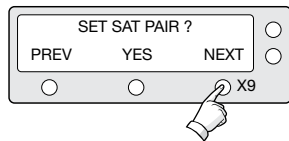


2. Press NEXT nine times to enter Antenna Go Position mode.

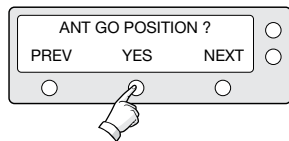


3. Press YES to go position.

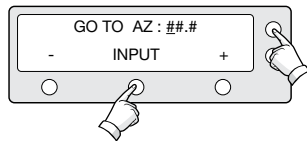


4. Input position value for azimuth (AZ) axis.
+increases the value. - decreases the value.
Change the underscored digit using the +/- buttons.
Press INPUT to accept the value and move to next digit.
Press BACK to move to previous digit.
Press ENTER to move to next screen.

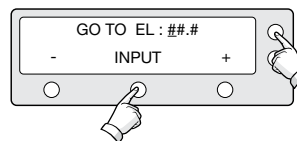

5. Input position value for elevation (EL) axis.
+ increases the value. - decreases the value.
Change the underscored digit using the +/- buttons.
Press INPUT to accept the value and move to next digit.
Press BACK to move to previous digit.
Press ENTER to move to next screen.

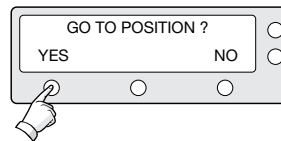

6. Press YES to move the antenna to input position.
Press NO to return to the Antenna Go Position mode.

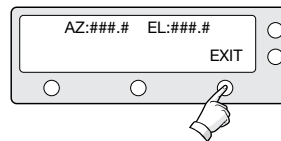


7. Press EXIT to return to main setup mode.


Intellian Satellite TV Antenna Systems

Setting Antenna Move Step


The antenna can be moved by 1° step manually by using ACU.

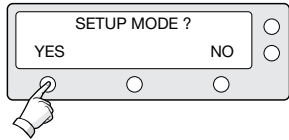


1. Press YES to enter setup mode.

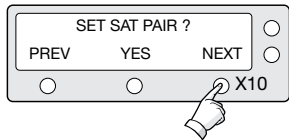


2. Press NEXT ten times to enter the Antenna Move Step mode.

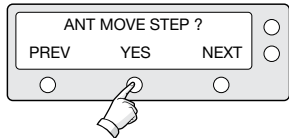

3. Press YES to move step.

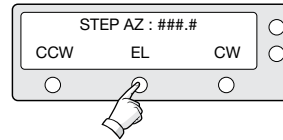


4. Move the antenna in the AZ axis.
CW - Move the antenna clockwise.
CCW - Move the antenna counter clockwise.
EL - Go to elevation control screen.

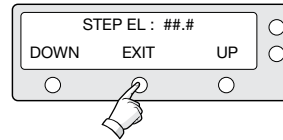


5. Move the antenna in the EL axis.
UP - Move the antenna up.
DOWN - Move the antenna down.
EXIT - Return to antenna move step mode.

Executing Antenna Diagnosis


The antenna status can be checked by reviewing the results of the diagnostic self-test of the antenna. Refer to the following codes to understand the test results.

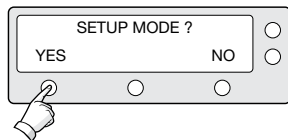


1. Press YES to enter setup mode.

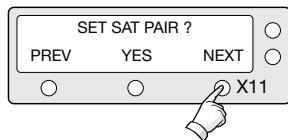


2. Press NEXT eleven times to enter Antenna Diagnosis mode.

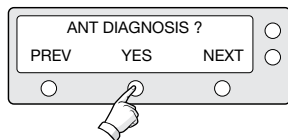

3. Press YES to diagnosis antenna.

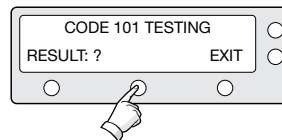

4. CODE 101 is being tested.
Press EXIT to return to main setup mode.

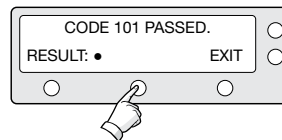

5. **CODE*** 101 has passed.
Press EXIT to return to main setup mode.

Intellian Satellite TV Antenna Systems

CODE*

CODE 101 Data communication between antenna and antenna control unit is tested. If failed, check the RF cable.

CODE 102 AZ CW limit is tested.
If failed, check the limit sensors, motor and belt for AZ axis.

CODE 103 AZ CCW limit is tested.
If failed, check the limit sensors, motor and belt for AZ axis.

CODE 104 EL axis is tested.
If failed, check the limit sensors, motor and belt for EL axis.

CODE 105 Sub reflector is tested.
If failed, check the sub reflector.

CODE 106 LNB is tested.
If failed, check the LNB and control board.

CODE 107 Skew System is tested.
if failed, check the control board, skew motor, and skew sensor.

CODE 108 Antenna Input Power is tested.
If failed, check the RF cable.

CODE 109 ACU Power is tested.
If failed, check the ACU power cable and Input DC power.

CODE 110 IRD Power is test to IRD cable and IRD power.

RESULT • Test is passed.


STATUS - Test is skipped.

? Test is under processing.


Number refers to an error code

(●●3●●● -●●●) 3 means error code 103.


Setting Region

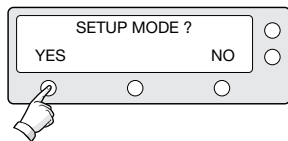


1. Press YES to enter setup mode.

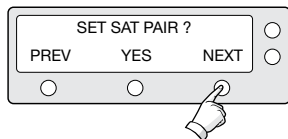


2. Press NEXT twelve times to enter load region information mode.

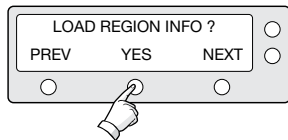


3. Press YES to load region information.

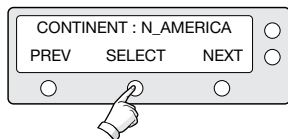


4. Select the **Continent**.*
PREV - Shows previous continent.
SELECT - Set the displayed continent.
NEXT - Shows next continent.

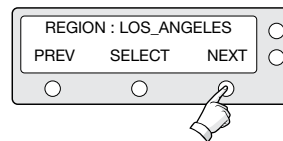

5. Select the **Region***.
PREV - Shows previous region.
SELECT - Set the displayed region.
NEXT - Shows next region.

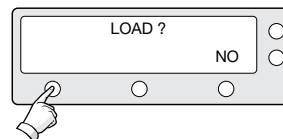

6. Press YES to load region information.
Press NO to cancel and return to main setup mode.

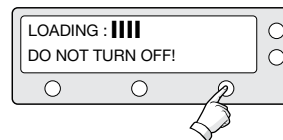

7. Loading selected region information.


Continent*
N. AMERICA, S.AMERICA, EUROPE, ASIA.

Region*
NEW YORK, MIAMI, UK, JAPAN, and etc.


Intellian Satellite TV Antenna Systems

Setting the Factory Default Parameters


This will restore the antenna back to factory default settings.

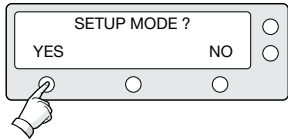

1. Press YES to enter setup mode.

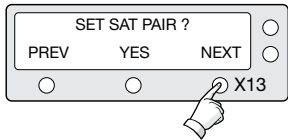

2. Press NEXT thirteen times to enter default setting mode.

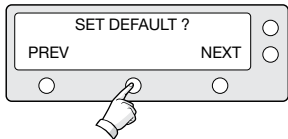

3. Press YES to set default parameters.

Operation Using PC Controller Program

Introduction

PC Software of Intellian i9P has been created for the user to easily set up the antenna by using personal computer. The program enables the user to easily monitor and modify the information of antenna, satellite and GPS. Additionally, detailed diagnostic methods of the antenna are provided by the PC program.

To start this program,

1. Connect one end of PC serial cable to the serial port on the computer.
2. Connect the other end of the PC serial cable to the "PC Interface" on the rear of ACU.
3. Execute program by inserting the CD-ROM into the computer.

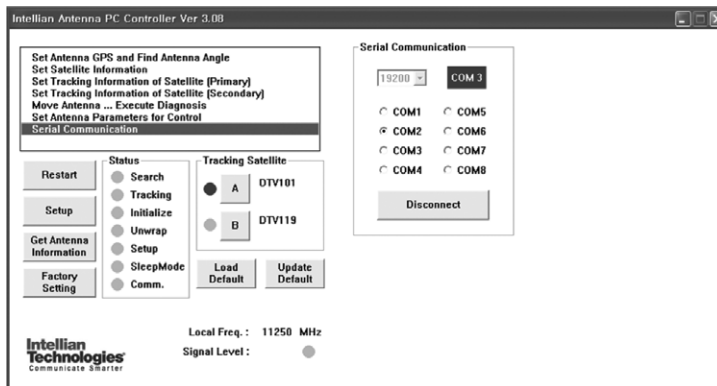


Figure 18 : Intellian Antenna PC Controller Program

Program Initialing and Serial Port Setup

The communication between the ACU and antenna must be established as the first step in order to start setting your antenna.

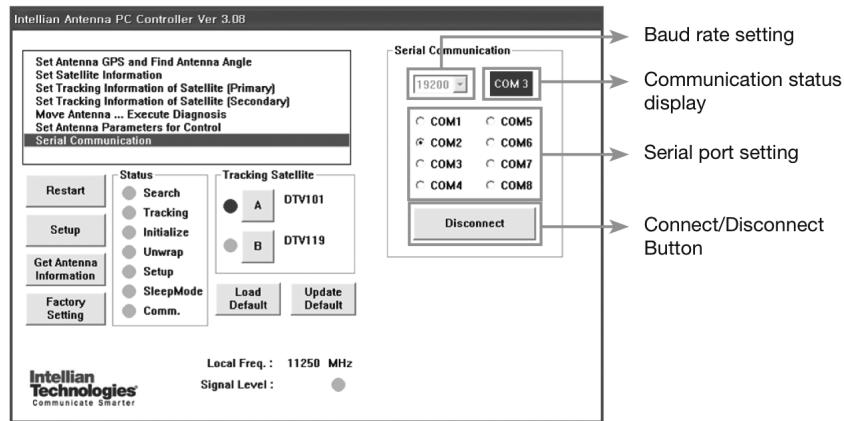


Figure 19 : Setup for Serial Communication

Command Buttons

- Baud Rate Setting – To display data communication speed.
- Communication Status Display – To display data communication between ACU and PC.
- Serial Port Setting – To select serial port to be used.
- Connect / Disconnect – To establish connection between ACU and PC.

Main Menu

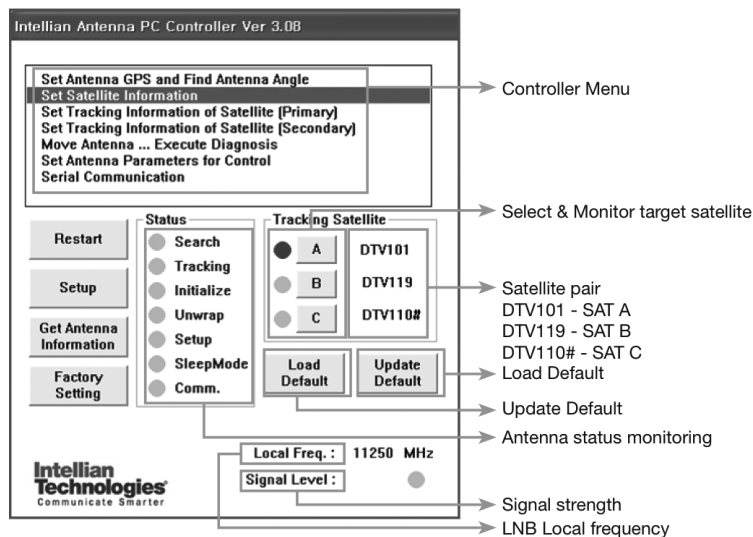


Figure 20 : Main Menu

Antenna Status Monitoring

- Search – Antenna is searching for the selected satellite.
- Tracking – Antenna is tracking the selected satellite.
- Initialize – Antenna or the ACU is initializing.
- Unwrap – Antenna is unwinding/winding the cable in the antenna.
- Setup – Antenna is in setup mode.
- Comm. – Antenna is able to be communicated.

Command Buttons

- Restart – To exit setup mode and restart antenna again.
- Setup – To enter the setup mode.
- Get Antenna Information – To indicate the information on display after receiving input from the antenna.
- Factory Setting – To initialize all antenna information to default as it was in the factory status.
- Load Default – To select the regional library on PC program.
- Update Default – To update the antenna using the selected regional library on PC program.

Intellian Satellite TV Antenna Systems

Set Region



Figure 21 : Load Regional Library

1. Load default: Click “Load Default” button to select satellite library (*.rif file) according to your current region.

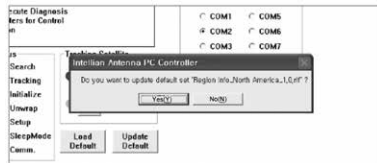


Figure 22 : Confirm the Update

2. Update default: Click “Update Default” button to open update default dialogue. Click “YES” button to update the system.

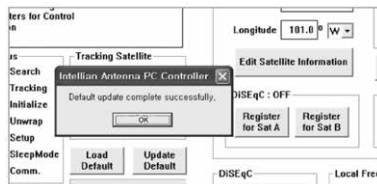


Figure 23 : Updates Completed

3. Click “OK” button to complete the update.

Controller Menus

Set Antenna GPS and Find Antenna Angle

Antenna makes use of GPS information to search satellite faster. More precise the GPS information is, quicker the antenna is able to search for a satellite. The method to input information into GPS is to push “Set GPS” button after keying in the latitude and longitude information on “City GPS”. Pushing “Add City” button stores the GPS information. By selecting the stored region in the list box, the GPS information of each region is displayed. The Intellian i9P satellite TV antenna system utilizes GPS data to locate the satellite faster.

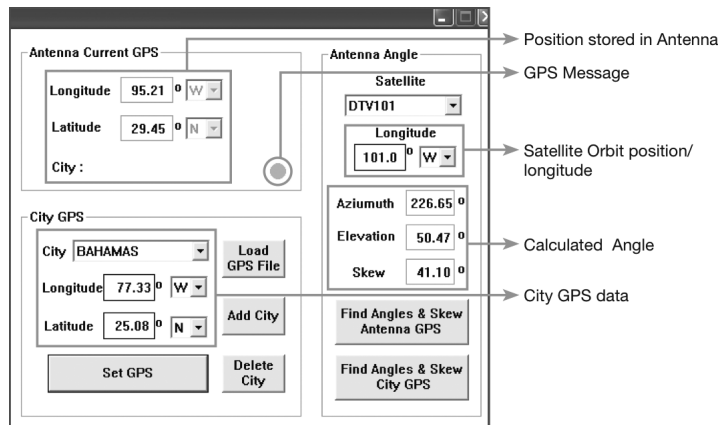


Figure 24 : Antenna Angle and GPS Information

Command Buttons

- Load GPS Files – Reads various city information from the GPS files.
- Add City – Adds the name of city and its GPS information to GPS files.
- Delete City – Deletes the name of city and its GPS information from the GPS files.
- Set GPS – Inputs the indicated GPS information on display to antenna.
- Find Angles & Skew Antenna GPS – Finds the current antenna angle and skew angle in relation to the longitude (orbit position) of satellite and antenna current GPS.
- Find Angles & Skew City GPS – Finds the current antenna angle and skew angle in relation to the longitude (orbit position) of satellite and city GPS.

Setting Satellite Information

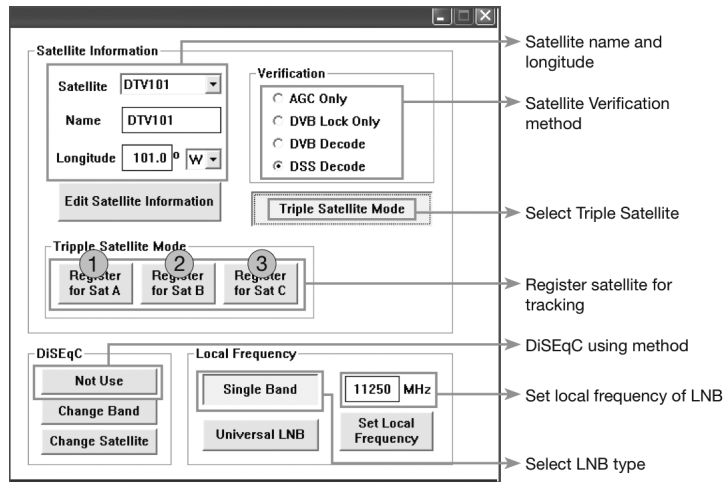


Figure 25 : Setup Satellite Information

• Satellite Information

The name, longitude, signal polarity, LNB local frequency and signal verification method of the satellite are displayed when a satellite is selected in the list box. Push "Edit Satellite Information" button to update the information on modifying the value.

• DiSEqC

When the operation method of DiSEqC is selected to "Change Band", DiSEqC may be used for updating the local frequency and to "Change Satellite", for updating the target satellite.

• Registration of target satellite

In case that Tri-sat Mode is selected and the DiSEqC is selected to "Not Use, only ① "Register for Sat A", ② "Register for Sat B" and ③ "Register for Sat C" may be registered. Pushing ① or ② or ③ button after selecting the satellite in the list box makes it possible to register A or B or C.

• Local Frequency

In case that DiSEqC is selected to "Change Band", be sure to push the "Universal LNB" button. In case that the DiSEqC is selected to "Not Use" or "Change Satellite", be sure to push "Single Band" button and key in into the Local Frequency, and then push "Set Local Frequency" button.

Command Buttons

- Edit Satellite Information - To modify the satellite information.
- Register for Sat A - To register a satellite to satellite A.
- Register for Sat B - To register a satellite to satellite B.
- Register for Sat C - To register a satellite to satellite C.
- Not Use - Do not use DiSEqC.
- Change Band - To use DiSEqC to change band.
- Single Band - Antenna is in use of single band LNB.
- Universal LNB - Antenna is in use of universal LNB.
- Americas LNB - Antenna is in use of Americas LNB.
- Set Local Frequency - To select local frequency of LNB.

Set Tracking Information of Satellite [Primary]

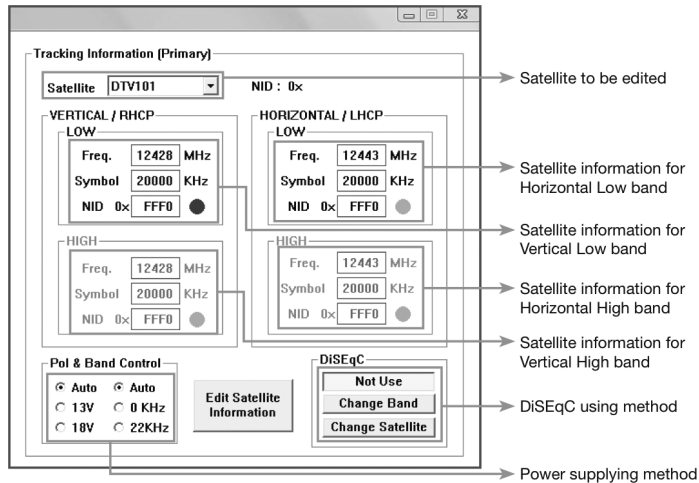


Figure 26 : Setting up the Primary Tracking Information

Command Buttons

- Edit Satellite Information – To change frequency information of the antenna.
- Satellite Information – Satellite information consists of frequency, symbol and NID (Network ID) of a transponder in tracking satellite. There are four groups of satellite information. ‘Vertical/RHCP’ is applied when IRD supply 13V, and ‘Horizontal/LHCP’ is applied when IRD supply 18V. ‘LOW’ is applied when DiSEqC signal is not detected from IRD, ‘HIGH’ is applied when DiSEqC signal is detected from IRD. If you select ‘Not Use’ or ‘Change Satellite’, two ‘HIGH’ groups are inactivated. If you select Change Band’, two ‘High’ groups are activated and you can modify satellite information which is applied when DiSEqC signal is detected from IRD. After modifying information, press ‘Edit Satellite Information’ button, then new information is updated in the antenna.
- Pol & Band Control – The “Pol” controls 13V (Vertical/ RHCP band) and 18V (Horizontal/LHCP band). The “Band” control DiSEqC 0KHz tone (Low band) and 22KHz (High band).

Voltage		DiSEqC		Discription
13V	18V	0KHz	22KHz	
AUTO	AUTO	AUTO	AUTO	13V & 18V and DiSEqC 0KHz & 22KHz tone to LNB
AUTO	AUTO	•		13V & 18V and DiSEqC 0KHz tone to LNB
AUTO	AUTO		•	13V & 18V and DiSEqC 22KHz tone to LNB
•		AUTO	AUTO	13V and DiSEqC 0KHz & 22KHz tone to LNB
•		•		13V and DiSEqC 0KHz tone to LNB
•			•	13V and DiSEqC 22KHz tone to LNB
	•	AUTO	AUTO	18V and DiSEqC 0KHz & 22KHz tone to LNB
	•	•		18V and DiSEqC 0KHz tone to LNB
	•		•	18V and DiSEqC 22KHz tone to LNB

Intellian Satellite TV Antenna Systems

Set Tracking Information of Satellite [Secondary]

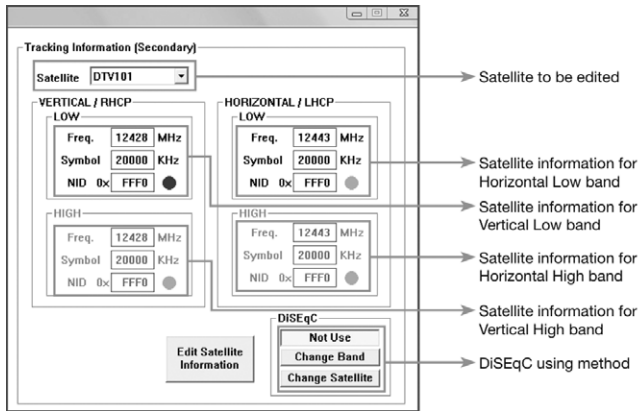


Figure 27 : Setting up the Secondary Tracking Information

Command Buttons

- Edit Satellite Information – To change frequency information of the antenna.

Move Antenna and Execute Antenna Diagnostics

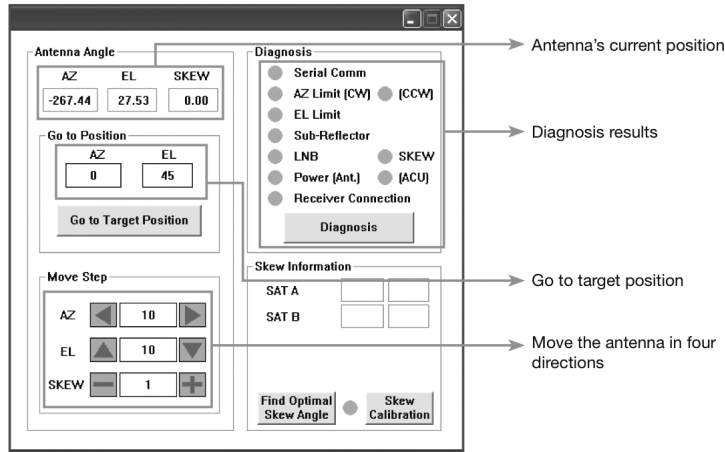


Figure 28 : Antenna Diagnosis

• Angle of Antenna

Two kinds of antenna movement is available. One is to move by the target position and the other is to move by certain amount of angle. The current position (angle) of the antenna is displayed as "Current" and to move to the target position, push "Go to target Position" button after keying in desired angle into "Target". To move to a certain amount of angle only, move antenna to direction of up or down, and CW or CCW by using ▲▼◀▶ buttons after keying in the desired angle into the AZ and EL in the "Move Step" box. Rotate LNB to direct the skew angle by using + - button.

• Self-Diagnosis

If the "Diagnosis" button is pressed, it displays the results of the self-diagnosis after the test is completed. The blue circle means the antenna is normal; red represents abnormal and green represents the antenna is under diagnosis.


Command Buttons

- Go to Target Position – To move the antenna to the present position.
- Diagnosis – To diagnose the antenna (BLUE – Passed, RED – Failed, GREEN – Under diagnosis)

Intellian Satellite TV Antenna Systems

Set Antenna Parameters for Control

It is not recommended for a novice satellite service user to use this mode. Consult Intellian for changing antenna parameters.

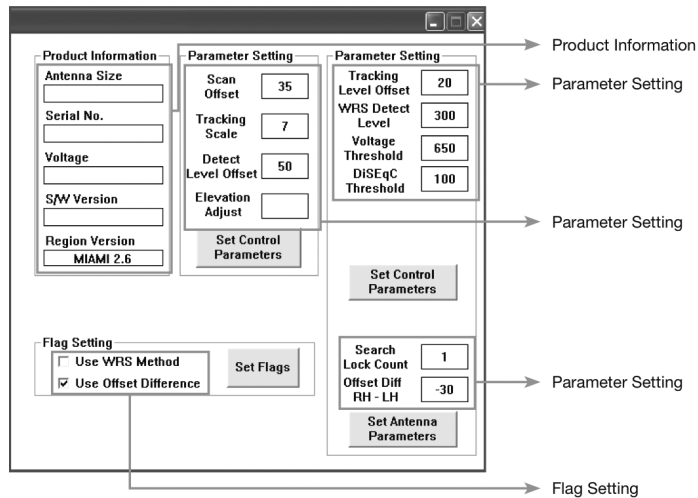

Command Buttons

- Set Control Parameter – To register parameters value.
- Set Flags – To set flag setting for WRS method or offset difference.

Figure 29 : Antenna Parameters

Parameter Setting - To set antenna parameter values.

Scan Offset The scan offset is to offset the angle difference between the black marker on the sub-reflector and the optical sensor.

Track Scale The track scale is to control the tracking speed while antenna is tracking the satellite.

Detect Level The detect level is to set the satellite signal detection level.

WRS Level The WRS level is to set the WRS detection level.

Track Offset The tracking offset is to offset the satellite signal tracking level.

Power Level The power level is to distinguish the voltage between 13 V and 18 V.

DiSeqC Level The DiSeqC level is to distinguish 0KHz tone and 22KHz tone.

Offset RH-LH The offset RH-LH is to offset the signal difference between RHCP and LHCP.

EL Offset The EL offset is to offset the angle difference between the mechanical elevation angle and actual elevation angle.

Use WRS Use WRS is to determine whether the system uses WRS level or not. "Use WRS" and "WRS Level" are pair functions.

Offset Difference Offset difference is to determine whether the system to uses "Offset RH-LH" or not. "Offset Difference" and "Offset RH-LH" are pair functions.

Preparation for Transportation

The following procedures to secure the antenna shall be strictly observed to protect it from being damaged during transportation.

1. Refer to the drawing on the right.
2. Rotate antenna left and right slowly until the limit switch is pressed.
Don't rotate it quickly, or you may damage the antenna limit system.
3. Turn the antenna by 360° to the reverse direction.
4. Insert a restraint foam in backside of the dish to secure the pedestal in position with the bottom radome.
5. Insert the cable ties to tight up the azimuth axis and the elevation axis.
6. Cover upper part of radome. Be careful not to touch the reflector when assembling upper part of radome.
7. Pack Intellian i9P into the original package box.

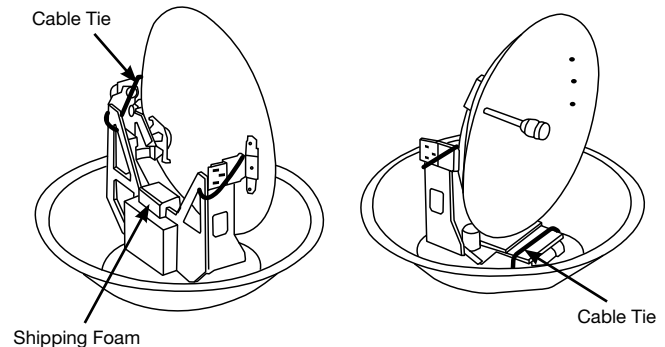


Figure 31 : Preparation for Transportation

Warranty

This product is warranted by Intellian Technologies Inc., to be free from defects in materials and workmanship for a period of Three (3) YEARS on parts and ONE (1) YEAR on labor performed at Intellian Technologies, Inc. service center from the purchased date of the product.

Intellian Technologies, Inc. warranty does not apply to product that has been damaged and subjected to accident, abuse, mis-use, non-authorized modification, incorrect and/ or non-authorized service, or to a product on which the serial number has been altered, mutilated or removed.

It is required to present a copy of the purchase receipt issued by Intellian Technologies, Inc. that indicates the date of purchase for after-sales service under the warranty period. In case of failure to present the purchase receipt, the warranty period will begin 30 days after the manufacturing production date of the product purchased.

Any product which is proven to be defective in materials or workmanship, Intellian Technologies, Inc. will (at its sole option) repair or replace during the warranty period in accordance with this warranty. All products returned to Intellian Technologies, Inc. under the warranty period must be accompanied by a return material authorization (RMA) number issued by the dealer/distributor from Intellian Technologies, Inc. and a copy of the purchase receipt as a proof of purchased date, prior to shipment. Alternatively, you may bring the product to an authorized Intellian Technologies, Inc. dealer/distributor for repair.

Appendix : i9P Technical Specification

General	
<hr/>	
Approvals	
CE – conforms to	EU Directive 89/336/EEC
FCC – verified to	CFR47:Part 15
<hr/>	
Dimensions	
Satellite antenna unit	113cm (44.6") x 121cm(47.5")
Antenna dish diameter	85cm(33.5")
Antenna control unit	17.8cm(7")x21.7cm(8.5")x5.4cm(2.1")
<hr/>	
Weight	
Satellite antenna unit	56.2kg (123.8 lbs)
Antenna control unit	1.2kg (2.6 lbs)
<hr/>	
Environmental	
Operating temperature range	-25°C to +55°C (-13°F to 131°F)
Storage temperature range	-30°C to +70°C (-22°F to 158°F)
Humidity limit	95% R.H
<hr/>	
Power requirements	9~30 V DC
<hr/>	
Power consumption	Typ. 30W, Max. 50W
<hr/>	

Antenna system performance	
<hr/>	
Frequency	Ku-band (10.7 to 12.75 GHz)
<hr/>	
Minimum EIRP	44 dBW
<hr/>	
Azimuth range	680°
<hr/>	
Elevation range	-15° ~ +90°
<hr/>	
Ship's motion	Roll ±25°
	Pitch ±15°
<hr/>	
Roll and pitch response rate	30° per second
<hr/>	
Turn rate	30° per second
<hr/>	

Intellian®

APAC

supportAPAC@intelliantech.com

Headquarters

Intellian Technologies, Inc.
348-5 Chungho-Ri, Jinwi-Myeon
Pyeongtaek-Si, Gyeonggi-Do 451-862 Korea
T +82 31 379 1000 F +82 31 377 6185

Seoul Office

Intellian Technologies, Inc.
2F Dongk Building, 98 Nonhyun-Dong
Gangnam-Gu, Seoul 135-010 Korea
T +82 2 511 2244 F +82 2 511 2235

Americas

supportAMERICAS@intelliantech.com

Irvine Office

Intellian Technologies USA, Inc.
9004 Research Drive
Irvine, CA 92618 USA
T 949 727 4498 F 949 271 4183

EMEA

supportEMEA@intelliantech.com

Rotterdam Office

Intellian B.V.
Bristolstraat 1, 3047AB
Rotterdam, The Netherlands
T +31 1 0820 8655 F +31 1 0820 8656

UK Office

Intellian Ltd.
Epsilon House, Enterprise Road, Southampton Science
Park, Southampton, Hampshire SO16 7NS, UK
T +44 2380 019 021 F +44 2380 767 092

Maritime Technical Center

MTC@intelliantech.com

Busan Office

Intellian Technologies, Inc.
#906 Ace High Tech 21, 1470 Woo-Dong
Haeundae-Gu, Busan 612-020 Korea
T +82 51 746 9695 F +82 51 746 9440

www.intelliantech.com