

Thank you for your purchase of the Adtec EN-100 Encoder/Modulator. This product is sold with optional modulator hardware packages. Configurations and indicators relevant to those add-on package are noted here. If you purchased this product without a modulator, please disregard settings noted with an asterisks.

### Quick View Status

For information on the core systems of the encoder, use the down arrow on the front panel to scroll through these quick view menus.

Encoder Status TMR Encryption  
 ENCODING: 20.000M CAS: BISS\_1  
 SVC: 00001 "Serv. Name" Serv. Provider  
 Service ID Service Name Service Provider

Input: Resolution Frame Rate Source Mode  
 I/RES: 1920x1080 25i INP: SDI MODE: AUTO  
 O/RES: 1920x1080 25i B/T/ID: OFF/OFF/OFF

Output: Resolution Frame Rate Bars/Tones/ID Status  
 Video PID CODEC Chroma Bit Depth  
 VID: 481 COD: H.264 CHR: 422 BITD: 10  
 VRT: 16989000b/s ENT: CABAC A/F: ON

Audio 1 - 8 Type Bitrate  
 1:MU 384k 3:MU 384k 5:MU 384k 7:MU 384k  
 2:MU 384k 4:MU 384k 6:MU 384k 8:MU 384k

Audio PIDS 1 - 8  
 Audio 1:11300 3:11400 5:11500 7:11600  
 PIDS 2:12300 4:12400 6:12500 8:12600

TSolP 1 - 4 RTP FEC Status Connector  
 1: SEND ON BUR GIGE 3: SEND OFF OFF GIGE  
 2: SEND ON OFF GIGE 4: OFF OFF OFF GIGE

ASI Remux Status Programs on Input  
 REMUX: ACTIVE PROGRAMS: 7  
 INPUT: 038.963Mb/s RESERVED: 040Mb/s

\*Modulator Status Mod FEC Power Roll Off  
 TX: Enable 32APSK\_9/10 Pwr: -30dB RO: 25%  
 Freq: 1291MHz DVB-S2 Sym: 15.00Ms Pilot: ON

### Front Panel Menus:

- Use Mode Button to move through top layer menus.
- Use select to enter into edit mode and enter to save selection.
- Use arrows for navigation in submenus.

### Special Keys:

- Use the F2 button as a decimal.

### LED Status

#### Video

- Off - If modulator is installed, no video is detected or ASI Recieve mode is enabled
- On - Video is detected
- Blinking - No video is detected and fault mode is active

#### Encode

- Off - Device is not encoding
- On - Device is encoding

#### AVC

- Off - MPEG 2 is selected for encode
- On - MPEG 4 (H.264) is selected for encode

#### 4:2:2

- Off - Encoding chroma type 4:2:0
- On - Encoding chroma type 4:2:2

#### 10-bit

- Off - Encoding depth of 8-bit
- On - Encoding depth of 10-bit

#### IP Out

- Off - IP Egress is idle
- On - IP Egress is active

#### \*RF Out

- Off - Modulator is not transmitting
- On - Modulator is transmitting
- Blinking - Modulator is in test mode

#### OTT

- Off - Feature not yet available.
- On - Feature not yet available.

#### Alarm

- Off - No system alarms
- On - System alarm

#### BISS

- Off - Encryption config is OFF
- On - Encryption config is ON

#### A1 - A8

- Off - Not encoding
- On - Encoding or Passthru Audio

#### Link

- Off - No network detected
- On - Connection active

#### Busy

- Off - No network activity
- On - Network traffic present

Services	*RF Tx	IP Tx	Video	Audio	PIDS	VBI	Profile	CAS	System
TS Mux Rate	Transmit	<< 1 - 4 >>	Input	<< 1 - 2 >>	Transport ID	Source	Select	Mode	Login
ABR Mode	Type	Mode	SDI Mode	Surround Sound	PMT PID	Closed Cap.	Save	Clear SW	Duration
Program Num	Mode	IP Tx Mode	CODEC	<< 1 - 8 >>	PCR PID		Delete	Encrypted SW	Backlight
Service Name	Local Oscillator	Tx IP Address	Entropy Coding	Input	Video PID			User ID 1	Network Menu
Service Provider	Uplink Freq	Tx Port	Chroma	Mode	Audio 1 PID			User ID 2	Time Menu
Tables	Frequency(MHz)	Tx GW Address	Deblock Filter	Type	Audio 2 PID				NTP Menu
ASI Rx Mode	Power(dBm)	DVB per IP	Video Field Cod.	Rate	Audio 3 PID				Alarm
ASI Mode	Spectrum Invrnsn	RTP	Video Rate	Level	Audio 4 PID				SNMP Menu
ASI Reserve	Fec Frame	FEC Mode	Autofill	Analog Level	Audio 5 PID				COM2
Carrier ID Menu	Roll Off	FEC L	Latency	Sync	Audio 6 PID				Feature Menu
Bars,Tones,ID	Pilot	FEC D	Latency Trim	Musicam Mode	Audio 7 PID				Name
	Rate Priority	Type of Service	Fault Mode	IFB	Audio 8 PID				Firmware
	Symbol Rate	TTL	Fault Resolution	SDI Pair	Teletext PID				
	Interface Rate	Tx Connector	Aspect Ratio	SDI Clock Source	AMOL PID				
	Carrier Mode		AFD	ECC Words	VITC Mode				
	10 MHz Clock		GOP Type	Audio Level B	VITC PID				
	Clock Comb.		GOP Structure		Splice Mode				
			GOP Size		Splice PID				
			3-D Sync Mode						

### Model Indicators:

- No modulator
- L-Band modulator
- IF Modulator

### Reset:


Should you need to reset your device, you can do so via the front panel by pressing the MODE, ESCAPE and RIGHT ARROW keys simultaneously.

There are 2 different encoder modules available for the EN-100 and the unit can be ordered with either or both:

- VE1 - 1080p AVC 420 8-bit
- VE2 - 1080i Multi-CODEC 10-bit

Units ship with the front panel logged in by default. If you become logged out and are prompted for a password, use the following key sequence for access.

- Press <Select> when panel displays 'User Login -- logged out'
- Press <Up arrow>
- Press <Select>
- Press <Enter>
- Press <Right arrow>
- Press <Enter>

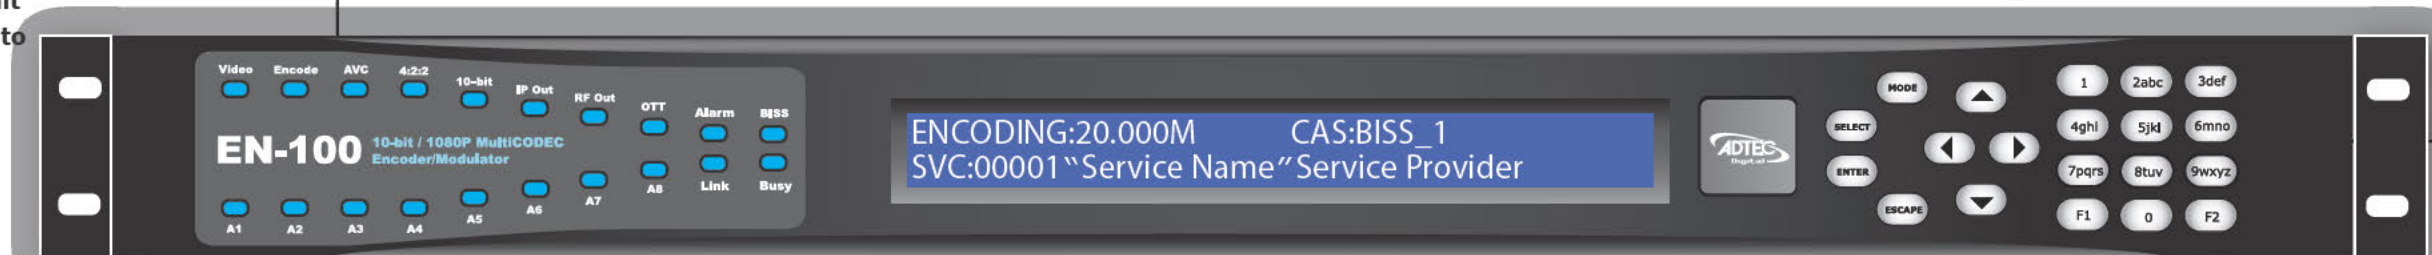

## Getting Connected

To begin, you will need to connect to your EN-100 via ethernet directly, or by adding the EN-100 to your local area network. The default address for all Adtec devices is **192.168.10.48**.

To connect directly to the device, make sure that your computer and the device have IP addresses within the same IP class range (ex. 192.168.10.48 for the device and 192.168.10.49 for your computer). If you need to change the IP address of the device, this can be done via the front panel, System > Network menu. Using a CAT 5 crossover cable, connect one end to your computer and the other to the Ethernet port found on the processor section of the back panel. (Some computers can auto negotiate the connection and a crossover may not be necessary.)

To add the device to a LAN, connect a standard CAT 5 Ethernet cable to your network router and then to the Ethernet port on the back of the device. If your network is DHCP enabled and you prefer that over a static IP, you can turn on DHCP for the device via the front panel, System > Network menu.

## Web-Based Control Application



Adtec Digital has adopted zero-configuration networking technology, streamlining the setup and configuration processes for our products. The use of this technology enables automatic discovery of Adtec devices and services on an IP network. Used in tandem with the web-based control and configuration applications we can now provide 1-click access to any device.

By using the built-in Bonjour® locator in Apple's® Safari® browser or the plug-ins readily available for IE® or Firefox® browsers, users can locate all of the Adtec devices on a network by referencing the serial number on the back of the device. Clicking on the unit in the Bonjour® list will re-route you to a login page. If you do not wish to use Bonjour, you can reach the device's web application by pointing your browser to the IP Address of the device. Ex. http://192.168.10.48/. You will be prompted for a username and password. **The default username is 'adtec'. The default password is 'none'.**

The left-hand panel of the application will report current status in real-time while the right panel tabs will allow you to configure your device.


Adtec Digital has adopted zero-configuration networking technology, streamlining the setup and configuration processes for our products. The use of this technology enables automatic discovery of Adtec devices and services on an IP network. Used in tandem with the web-based control and configuration applications we can now provide 1-click access to any device.

By using the built-in Bonjour® locator in Apple's® Safari® browser or the plug-ins readily available for IE® or Firefox® browsers, users can locate all of the Adtec devices on a network by referencing the



**Have questions?** Each field or group of fields in our web-based application has a hint button associate with it. It contains information on use of the field or acceptable ranges.

## Getting Started

Once your encoder is accessible via network, you can set it up for transmission. You will need to adjust the configurations using the front panel or web UI. As you make changes, you will see the status sections on the left hand side of the web UI adjust. These status sections report the majority of the critical information needed for monitoring during a transmission. Each of these status menus can be collapsed by clicking on the  icon. This allows you to view only that information which is most critical for you, but keeps a LED indicator visible for all sections at all times for alarms.

### EN-100

Version 2014-01-07\_12-09-54

Temperature: 64(C)

**Encoding Status:**  
 ENCODING: 4 days 23:24:40.12  
 Bars/Tones/ID: OFF/OFF/OFF  
 Last Loaded Profile: N/A


**Service Data:**  
 TransMux Rate: 80 (Mbit/s)  
 Service Name: EN-100-VE-02-...  
 Service Provider: EN-100-D7  
 Encryption: OFF

**Modulator Status:**  
 NOT TRANSMITTING  
 Symbol Rate: 5 (Msym/s)  
 Interface Rate: 7.437366 (Mb/s)  
 Frequency: 950 (MHz)  
 Type/Mode/FEC: DVB-S2/QPSK\_3/4  
 Occ. Bandwidth: 6.25 (MHz)

**IP Status:**  
 1: TRANSMITTING - NO FEC  
 IP Addr./ Port: 226.0.1.100/2000  
 2: NOT TRANSMITTING  
 3: NOT TRANSMITTING  
 4: NOT TRANSMITTING

**Video Status:**  
 Video Detected: SDI  
 Resolution: 1920x1080  
 CODEC/Chroma: MPEG2 / 422  
 Frame Rate: 29.97  
 AutoFill Rate: ON / 74669000

**Audio Status:**  
 Frequency: 48000(Hz)  
 A1: RUNNING SDI/ENCODE  
 MPEG 2 Layer 2 / STEREO / 384000(b/s)  
 A2: RUNNING SDI/ENCODE  
 MPEG 1 Layer 2 / STEREO / 384000(b/s)  
 A3: RUNNING SDI/ENCODE  
 MPEG 1 Layer 2 / STEREO / 384000(b/s)  
 A4: RUNNING SDI/ENCODE  
 MPEG 1 Layer 2 / STEREO / 384000(b/s)  
 A5: RUNNING SDI/ENCODE  
 MPEG 1 Layer 2 / STEREO / 384000(b/s)  
 A6: RUNNING SDI/ENCODE  
 MPEG 1 Layer 2 / STEREO / 384000(b/s)  
 A7: RUNNING SDI/ENCODE  
 MPEG 1 Layer 2 / STEREO / 384000(b/s)  
 A8: RUNNING SDI/ENCODE  
 MPEG 1 Layer 2 / STEREO / 384000(b/s)

the web UI adjust. These status sections report the majority of the critical information needed for monitoring during a transmission. Each of these status menus can be collapsed by clicking on the  icon. This allows you to view only that information which is most critical for you, but keeps a LED indicator visible for all sections at all times for alarms.

**Encoding Status:** These values indicate the encoder's state and displays alarms when a video loss event is detected.

**Service Data:** These values indicate the service or program data being used in your transmission as well as the total TMR output.

**\* Modulator Status:** Devices containing the optional modulator will display this status window indicating activity and critical uplink parameters.

**IP Status:** These values indicate the status of IP Egress including address, port and FEC parameters.

**Video Status:** The video status information is auto-detected per the input selected. Information such as resolution, chroma, framerate and video rate are included.

**Audio Status:** This section will display all audio status including bitrate, format and audio input selected.

## Power

**Power 1 & 2** Redundant AC Power, Standard 3 pin computer power plug (Auto range 70-240 VAC Input)

## Modulator (optional)\*

**Main** RF output, 50 Ohm BNC  
 L-Band Model: Frequency range 950 MHz to 2.150 GHz, Power Level -35 to +5 dBm  
 IF Model: Frequency range 50 MHz to 180 MHz, Power Level -30 to +5 dBm

**Monitor** RF output, 50 Ohm BNC  
 L-Band Model: Fixed power level at -45 dBm  
 IF Model: Fixed power level at -45 dBm, fixed frequency at 1.08 GHz

**10MHz Clock** BNC 50 Ohm connector for external 10MHz reference input

## Processor

**GigE** TSolP UDP/RTP/SMPTE2022 multicast or TCP transport egress port  
**COM2** API Serial Communication Interface  
**COM1** Serial Port Used for Troubleshooting (Terminal)  
**Ethernet** 10/100 base T ethernet interface (Monitoring/Management)  
**DVC Parport** 9-pin parallel I/O interface for control systems  
**RS422** Not Currently Supported  
**GPIO** Tally and Control Port

## Encoder


**ASI OUT** 75 Ohm source ASI x3 per EN5000839. Up to 150 Mbps.  
**CVBS In** 75 Ohm terminated Standard Definition Composite Video Input  
**SDI In** 75 Ohm terminated Input, Video & Audio (SMPTE 259M for SD & SMPTE 292M for HD) BNC  
**AES Audio In 1-8** 75 Ohm AES-3 per AES3-2003  
**Analog Audio In** Stereo Pairs 1 and 2 (600 Ohm Balanced)  
 \* SFP Module Single channel optical receiver module. SMPTE 297-2006 - Purchased Option.  
**ASI In** 75 Ohm terminated ASI per DVB-ASI. Up to 100 Mbps

## Modulator Line-UP\* For access, press the F1 and F2 keys simultaneously.

This feature enables the operator to quickly view and/or configure select modulator RF output parameters. The parameters available in this menu are;

**Carrier Mode:** [ PURE\_CARRIER or ON ] **Output Power:** [ in 0.5dB increments ]  
 Use SELECT Button to toggle. Press or hold UP or DOWN arrows to adjust.

**Transmit:** [ ENABLED or DISABLED ] **Output Frequency:** [ in 1.0MHz increments ]  
 Use ENTER Button to toggle. Press or hold LEFT or RIGHT arrows to adjust.

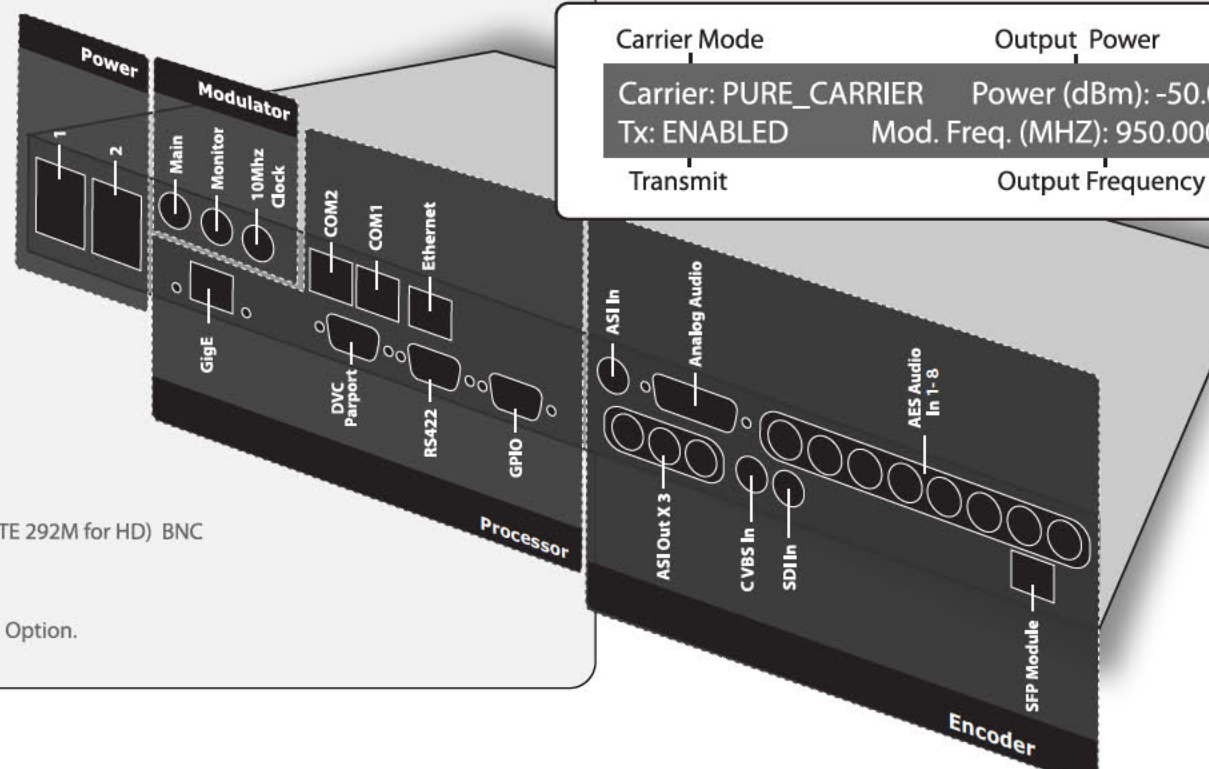

Carrier Mode: PURE\_CARRIER  
 Output Power: Power (dBm): -50.0  
 Tx: ENABLED  
 Mod. Freq. (MHZ): 950.000

Transmit  
 Output Frequency